


FastFill System



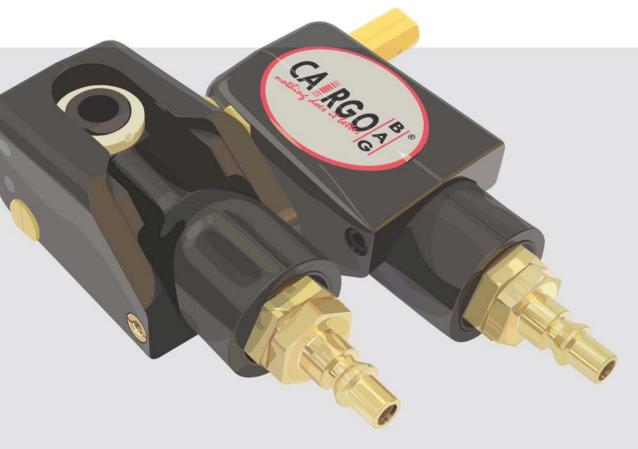

Introduction

Inflating a dunnage bag is not just about getting the air in the bag.

Todays modern companies demand fast, safety, ease of use and reliability. The way an inflation-

system works in daily operation and safety for the operators are important aspects. Cairgo is pleased to introduce the new FastFill system. This inflating system meets nowadays requirements for fast, safe and easy inflation. The FastFill system consists of the new MouseTip connector tool and the FastFill valve. The compact design of the MouseTip makes it easier to fit into narrow voids allowing quick and correct placement of the CairgoBags. This inflating system for CairgoBags is fast, safe and easy to use.

Advantages for your organisation

Easy to apply, easy to use and operator error is eliminated.

Safe: The air tool is locked onto the valve, reducing the chance of the connector coming off during inflation.

Fast: The MouseTip is quickly installed on the valve and quickly inflates the bag.

Compact: The MouseTip has a compact, ergonomic design, allowing the MouseTip to be used in narrow voids.

Inexpensive: Although the high quality of the MouseTip, the MouseTip is still relatively inexpensive.

How it works

As mentioned before, the FastFill system is easy to use in daily operation:

Position the CairgoBag in the void created by the cargo. When the CairgoBag is in place, just position the connector on the valve and slide the MouseTip on the valve until the opening of the MouseTip connects with the opening of the valve.

Then push the slide pin fully to the lock position. This safety system prevents the MouseTip from coming off during inflation of the CairgoBags.

Once the MouseTip is connected and locked, the CairgoBag can be inflated.

The MouseTip can be used just as easy for deflation of the CairgoBag

(e.g. in order to reposition the CairgoBag). In this case the MouseTip has to be disconnected from the air tool. Subsequently, only connect the MouseTip to the valve as described above. Once the slide pin is in the lock position the compressed air will leave the CairgoBag via the back of the MouseTip. After deflation the CairgoBag can be repositioned and inflated to the proper air pressure.

Available types of dunnage bags

CairgoBags are available in different sizes, strengths and materials namely paper and poly-woven. Please contact us for information and advice on which type and size of bag to use for your specific situation. You can also find more detailed information about FastFill on our website: www.cairgo.com



